



519
ADAFRUIT

[Buy Now](#)



Looking for a discount?

[Check out our current promotions!](#)

Give us a call

1-855-837-4225

International: 1-415-281-3866

Email Us



Sales and New Orders: sales@verical.com

Order Support: support@verical.com

Suppliers: [Visit our seller page](#)

Company Address

Arrow Electronics, Inc
9201 East Dry Creek Road
Centennial, CO 80112

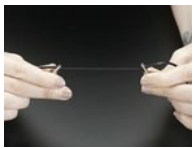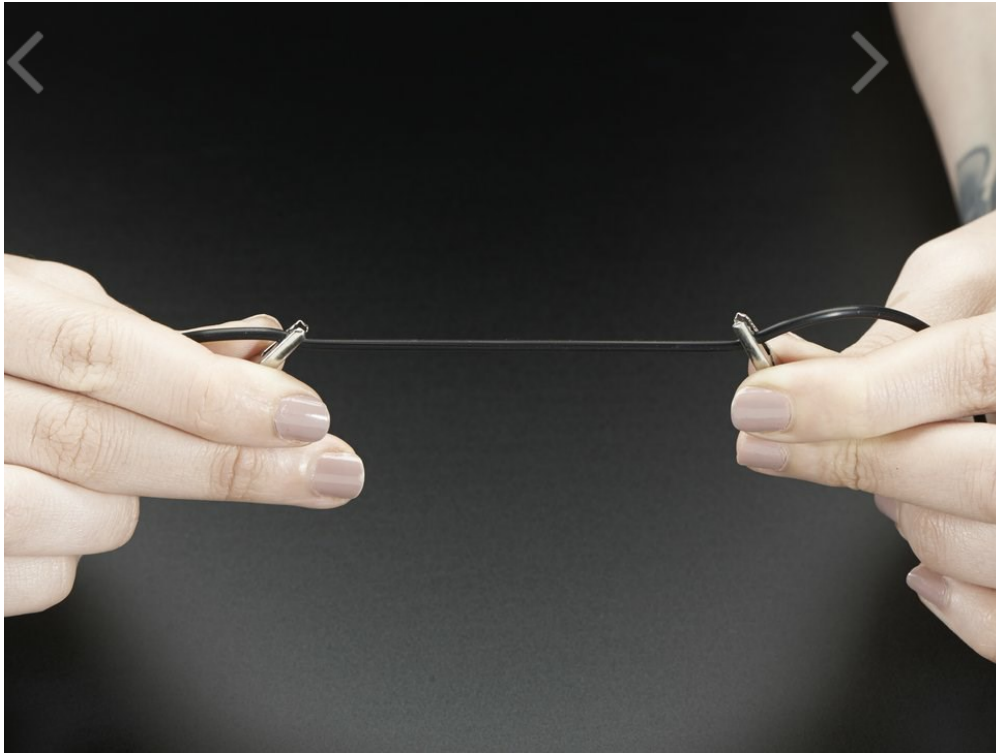

Conductive Rubber Cord Stretch Sensor + extras!

PRODUCT ID: 519

IN STOCK

1

ADD TO CART

1-9

10-99

100+

ADD TO WISHLIST

DESCRIPTION

TECHNICAL DETAILS

DESCRIPTION

Measuring stretch forces isn't easy - unless you have some conductive rubber cord! This cord is 2mm diameter, and 1 meter long, made of carbon-black impregnated rubber. Usually this material is used for EMF gasketing, but its also very fun to play with.

In a 'relaxed' state, the resistance is about 350 ohms per inch. As you pull on it, the resistance increases (the particles get further apart). As you stretch it out, the resistance increases. So lets say you have a 6" piece - thats about 2.1 Kohms. Stretch it to 10" long and now it is $10"/6" * 2.1K = 3.5$ Kohms. You can stretch the rubber about 50-70% longer than the resting length, so a 6" piece shouldn't be stretched more than 10". Once the force is released, the rubber will shrink back, although its not very 'fast' and it takes a minute or two to revert to its original length. It's not a true linear sensor, and the resistance may vary from batch to batch, so we consider it a way to measure stretching motion but isn't really precise.

This stuff is fun, so we give you a full meter and also two alligator clips (to connect to the cord) and a 10K resistor. Together, you can use these to make a simple voltage divider. Then use our handy [Thermistor tutorial](#) to measure the analog voltage and convert that back to resistance.

TECHNICAL DETAILS


Length: approximately 1 meter = 39 inches

Diameter: 2mm

Resistance: 350-400 ohms per inch / 140 - 160 ohms per centimeter

We give you a full meter and also two alligator clips (to connect to the cord) and a 10K 1% resistor. Together, you can use these to make a simple voltage divider. Then use our handy [Thermistor tutorial](#) to measure the analog voltage and convert that back to resistance.


MAY WE ALSO SUGGEST...

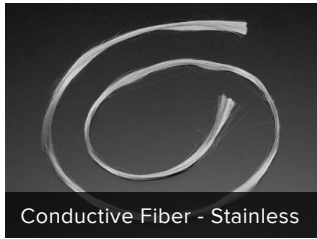

Conductive Fiber - Stainless



Stainless Thin Conductive

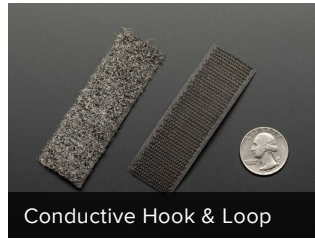

Conductive Hook & Loop



Stainless Medium



3M Z-Axis Conductive Tape



Pressure-Sensitive



Small Alligator Clip Test

DISTRIBUTORS [EXPAND TO SEE DISTRIBUTORS](#)

[CONTACT](#)

[SUPPORT](#)

[DISTRIBUTORS](#)

[EDUCATORS](#)

[JOBS](#)

[FAQ](#)

[SHIPPING & RETURNS](#)

[TERMS OF SERVICE](#)

[PRIVACY & LEGAL](#)

[ABOUT US](#)

"Propel, propel, propel your craft softly down liquid solution. Ecstatically, ecstatically, ecstatically, ecstatically, existence is simply illusion" - Fred Rogers

ENGINEERED IN NYC Adafruit®



4.9 ★★★★★
Google
Customer Reviews